



• Suitable for wooden pallets, plastic pallets.



Dimensional Drawing

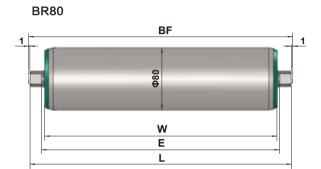

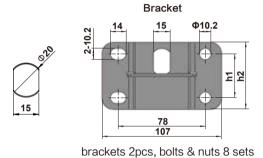

Model	h1	h2	
80-55	30.3	55	
80-60	39	60	


Model	D*T	L Min mm	L Max mm			
BR80/AA	80x2.5	265	1350	BF=L+2	E=L-30	W=L-38
BR80/BA	80x2.5	340	1350	BF=L+2	E=L-30	W=L-38
BR80/AS	80x2 5	265	1350	BF=I +2	F=L-30	W=I -38

Specifications

Model	D*T	Shaft	Weight Range	Tube		
Wodel	<i>D</i> 1	Onart	VVeignt range	Steel, zinc plated	Steel, zinc plated, knurled surface	
BR80/AA	80x2.5	b/h = 15/20 Milled Flats	200-1000kg	$\sqrt{}$	V	
BR80/BA			1000-1500kg	\checkmark	√	
BR80/AS			200-1000kg		V	

[☆] Knurled surface for better frictional force.

Part No.

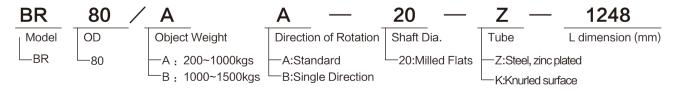


^{*}BR80/AS is suitable for LIFO push-back.

Installation Instructions





- 1. Fix one bracket (opening socket upward) with bolts and nuts at the inner side of rack.
- 2.Put milled flat in opening socket of fixed bracket, put the other end into another bracket, fix it at the inner side of rack with bolts and nuts.
- 3.Brake roller's surface should above gravity rollers' surface 1-2mm to ensure the speed controlling effect.

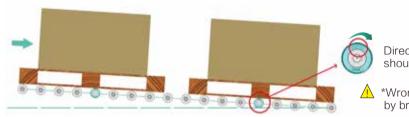

Direction of arrow on the end cap should be the same as brake roller's rotate direction

*Wrong install direction will cause goods outrush risk by brake roller malfunction.

Suggestion

- 1. Gravity roller rack's slope range as 1.5~2.3°. Pallet weight please check specifications table.
- 2. Installation pitch of brake rollers should be as the length of the pallet, no impact or accelerated speed is permitted.
- 3. Pitch of adjacent brake rollers should be less than the depth of pallet in flow direction, avoid accelerated speed and impact during flowing.
- 4. Please apply few brake rollers in actual weight and slope on gravity rack for test before bulk installation.
- 5. When you meet special application (heavy weight big slope or light weight small slope), please contact us for consultation.

^{*}Environmental Tempreture: -5° C ~ +40°C, Humidity: 30% ~ 70% RH without condensation.